


FLOOR DETAIL

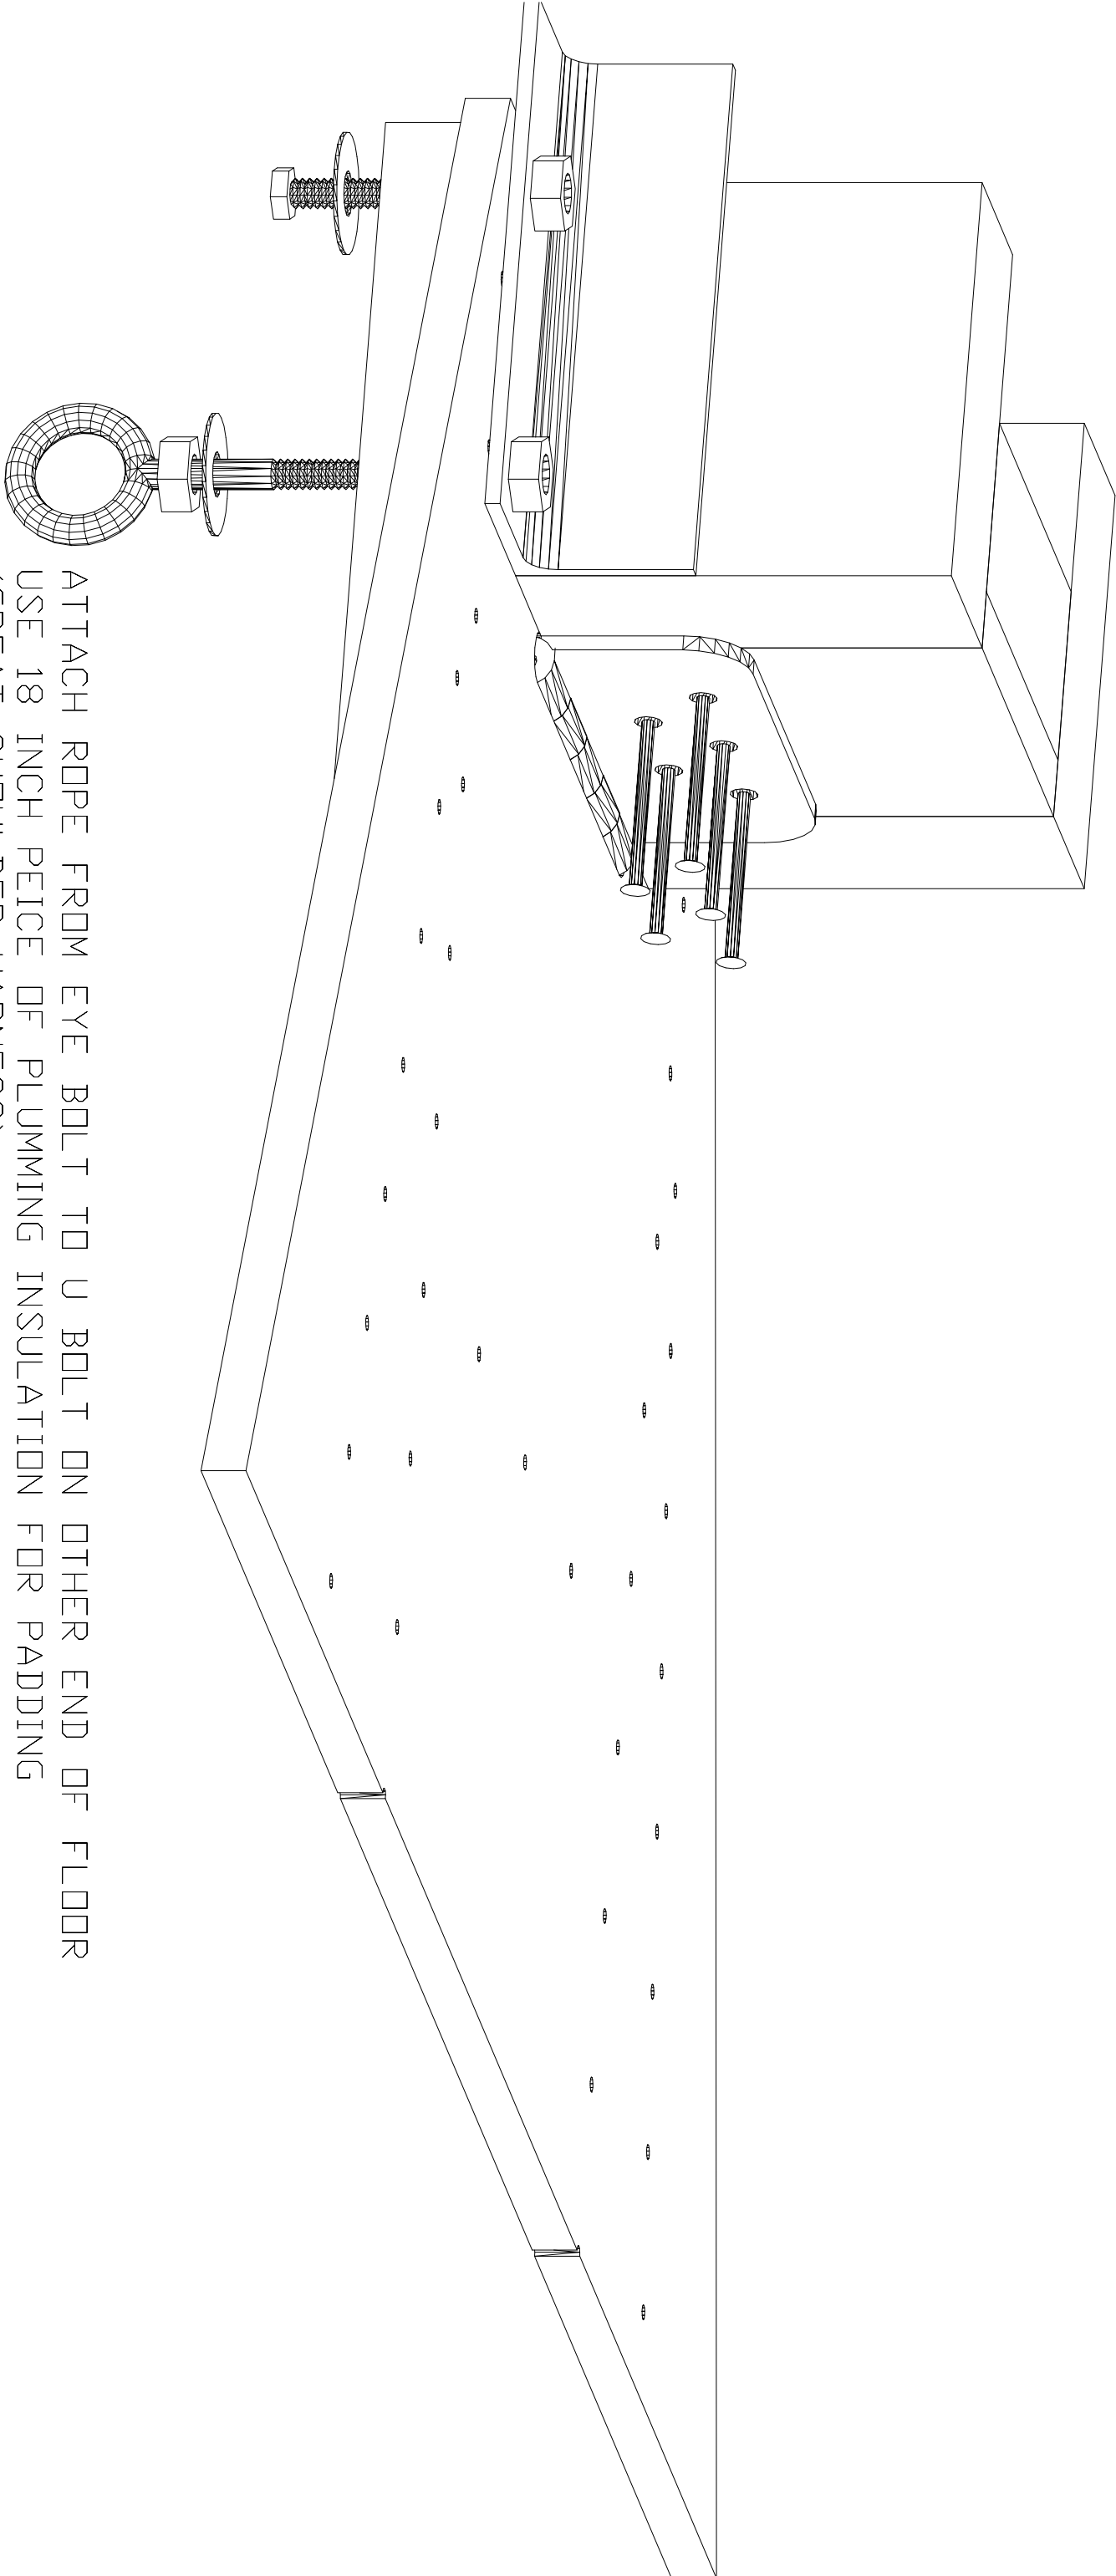

ATTACH ROPE FROM EYE BOLT TO U BOLT ON OTHER END OF FLOOR
USE 18 INCH PEICE OF PLUMMING INSULATION FOR PADDING
(GREAT SHOULDER HARNESS)

ATTACH 1/4 INCH EYE BOLT FROM BOTTOM AS SHOWN FOR CARRYING STRAP
ATTANCH ANGLE BRACKET PROTRUDE 1 INCH FROM BACK FOR STABILITY AGAINST TREE
ATTACH ANGLE BRACKETS WITH 1/4 X 2 1/2 INCH BOLT NUTS & WASHERS (BOTH SIDES)